

## Pairing RF remote to Blind Motor

1

1) Press and hold down the "Stop" button for 6 seconds. The LED will flash to confirm.

2

2) Now press "Up" button on the remote, LEDs will flash to confirm.

